

Pressurized Coolant Reservoir & Coolant Level Sensor For 2011-2015 International Prostar


Item #26004

COOLANT TANK INSTALLATION INSTRUCTIONS

- 1 Disconnect clamps and hoses and drain coolant from the original tank. Unplug the original tank's coolant level sensor if needed.
- 2 Unbolt and remove tank.
- 3 Inspect the hoses for any damage. If needed, replace any worn out or damaged hoses.
- 4 Install new tank and bolt down.
(see truck's service manual for torque specifications)
- 5 Connect all hose connections onto the new tank and clamp down with hose clamps.
- 6 Connect coolant level sensor.
- 7 Remove cap and fill the reservoir with coolant fluid. Check for leaks. Consult your truck's service manual for proper coolant bleeding procedures.
- 8 Re-install the reservoir cap.



Reservoir Cap

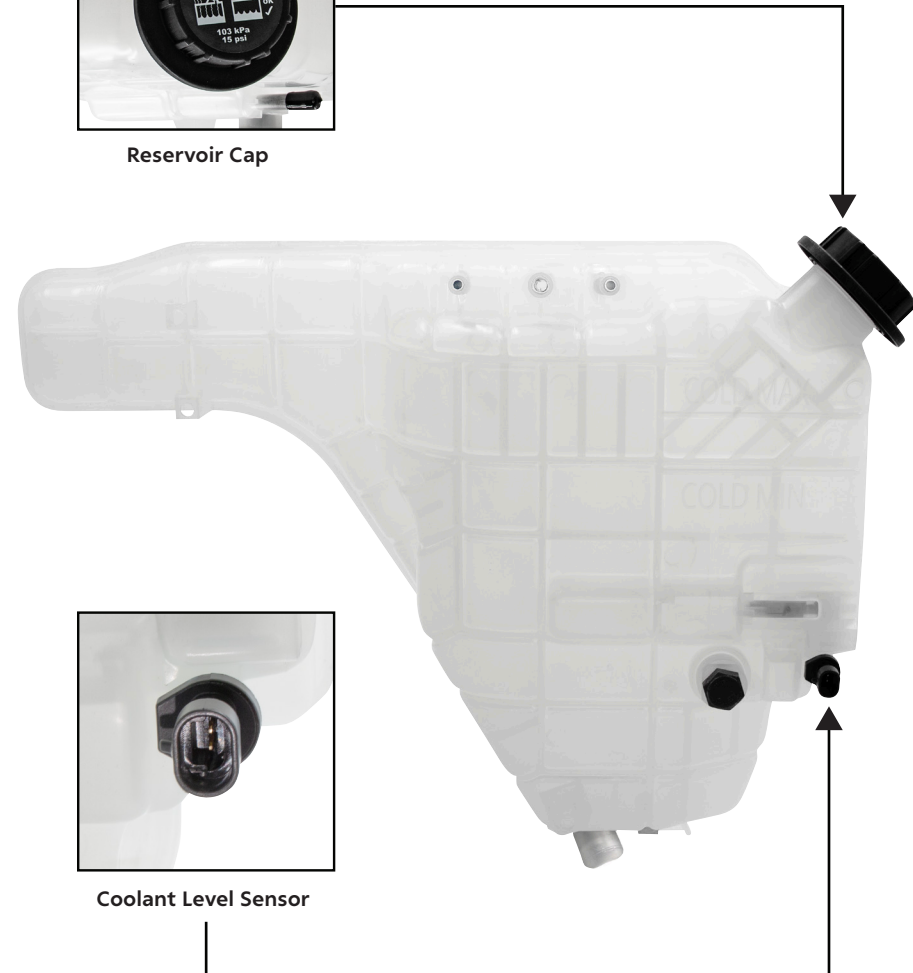

Coolant Level Sensor